
Surface coating : glossy varnish.

6.25 Inches

ATRIX ? LED LIGHT BULB WITH REMOTE USER GUIDE

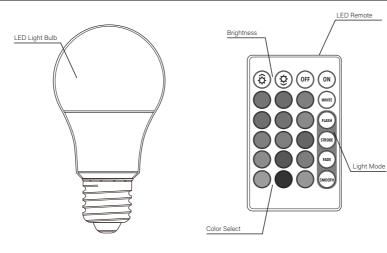

Need Help?

Have any questions or comments? Need help getting set up? Contact us at https://care.gamestop.com

What's Included

- · RGB LED Light Bulb
- Remote Control

Setting up the Light Bulb

- Before installation make sure the lamp or light socket is off, and if possible unplugged from the power source.
- Place the light bulb in the fixture and screw it into place.
- Be sure to turn the bulb slowly into the socket to make sure it correctly aligned.
- Make sure the bulb is fully screwed into the light socket, but do not tighten to much to avoid damaging it.
- Don't squeeze the bulb very hard as you put it into place.
- Power on the light source.

Using the Remote

- The remote is already connected to the bulb. Use it to select colors, strobe, light intensity and more.
- When using the remote for the first time be sure to remove the protective film from the battery. The remote uses CR2025 batteries, if it is not working replace the battery.

Model: GSHP710 Power: 5 Watts Input: AC100-240V~50/60Hz 0.1A Light Bulb Size: 60mm(Φ) x 108mm(H), Max Brightness: 400 lumens

Important Safety Instructions

⚠ WARNING

When using this product, basic precautions should always be followed, including the following:

- Read these instructions carefully.
- All cautions and warnings should be followed
- Protect equipment from humidity.
 Do not use chemical detergents to clean your device, use a
- soft dry cloth.

If one of the following situations arise, equipment has to be checked by qualified service personnel:

- · Liquid has penetrated into the equipment
- Equipment has been dropped and/or is damaged.
 Equipment has obvious sign of breakage.
- Equipment does not work well or you cannot get it working according to user's manual.

SAVE THESE INSTRUCTIONS

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

⚠ WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

⚠ WARNING

Chemical Burn Hazard. Keep batteries away from children. Do not ingest the battery. The remote control supplied with this product contains a coin/button cell battery, if the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Battery Warning Statement:

Insert the battery in the proper direction as indicated by positive (+) and negative (-) markings in the battery holder. Remove a depleted battery promptly and recycle or dispose of it in accordance with Local and National Disposal Regulations. If a battery leaks, remove it and recycle or dispose of it in accordance with battery manufacturer's instructions and Local and National Disposal Regulations. If fluid from the battery comes into contact with skin or clothes, flush with water immediately. Remove the battery if you device is to be stored for an extended period of time without being used.

Geeknet, Inc. 625 Westport Pkwy, Grapevine, TX 76051 Phone: 855-474-7717 6.75 Inches