


ATRIX ? XBOX PLAY AND CHARGE BATTERY KIT USER GUIDE

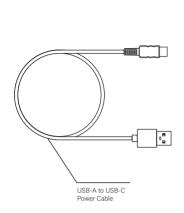

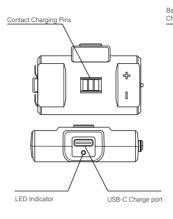

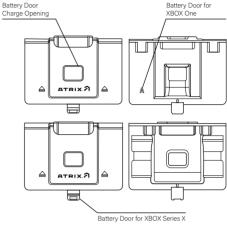

Need Help?

Have any questions or comments? Need help getting set up? Contact us at https://care.gamestop.com

What's Included

- · Rechargeable Battery x2
- Battery Door x4

 (2PCS For XBOX One and 2PCS For XBOX Series X) · USB-A to USB-C Cable

Using the Battery

- · Install the rechargeable battery into the battery compartment of your XBOX wireless controller.
- · Attach the correct battery door to the back of XBOX wireless controller. There is an XBOX One and XBOX Series X door, be sure to use the correct one.
- Plug the USB-C end of the charging cable into the battery pack. Plug the USB end into a DC 5V 1A minimum power supply warning: Please use a UL compliant power supply.
- · Check LED color for charge status: Orange Charging White - Fully Charged
- Note: The battery can also be charged out of the controller.

Battery Parameters

- · Capacity: 1200mAh 2.4V 2.88Wh Input: DC 5V 350mA
- Charging voltage: 5V
- Charging current: 300mA ~ 350mA
- Charge time: 2.5h ~ 3H
- Charging auto shut off: 4H
- Light display: Orange (charging) / White (fully charged)

Important Safety Instructions

WARNING When using this product, basic precautions should always be followed, including the following:


- · Read all of the instructions before using the product.
- · To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Do not put fingers or hands into the product.
- Do not expose battery to rain or snow.
- · Use of a power supply or charger not recommended or sold by the battery manufacturer may result in a risk of fire or injury to persons.
- · Do not expose to fire or excessive temperatures
- · Exposure to fire or temperature above 212°F (100°C) may cause the battery to explode.

Installing the Battery and Cover


• Step 1 - Check the positive (+) and negative (-) symbols of the battery pack and the battery compartment of your XBOX wireless controller



 Step 2 - Insert the battery pack and make sure it is aligned properly. If it is inserted incorrectly, the battery will not power the controller and may cause a malfunction.

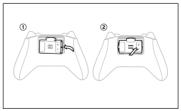

• Step 3 - Be sure to use the correct cover for your controller XBOX One has an A marking on the back and the XBOX Series X has an arrow

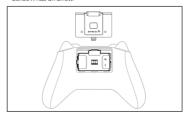

7.75 INCHES