WARNING

READ THE INSTRUCTION MANUAL CAREFULLY BEFORE USING THIS PRODUCT

IMPORTANT.

Before first use, the battery must be charged for at least 6 hours

The battery may need to charge/discharge a minimum of 5 times to achieve optimal performance. Follow the instructions below:

- Step 1: Place the battery into the controller.
- Step 2: Connect the charger cable to the USB port on the controller.
- Step 3: Allow the controller to charge the battery for 5 minutes and then remove the charging cord.
 Repeat steps 2 & 3 for five times.

Cycle 1	Cycle 2	Cycle 3	Cycle 4	Cycle 5
□ Complete				

• Step 4: Allow the battery pack to fully charge for 6 hours before first use.